



Repairing HP Photosmart D110a Paper Jam

This guide will explain how to unjam the paper in your printer.

Written By: Tim Wise




Step 1 — Repairing HP Photosmart D110a Paper Jam



- First, identify the piece of paper that is causing the jam.

Step 2

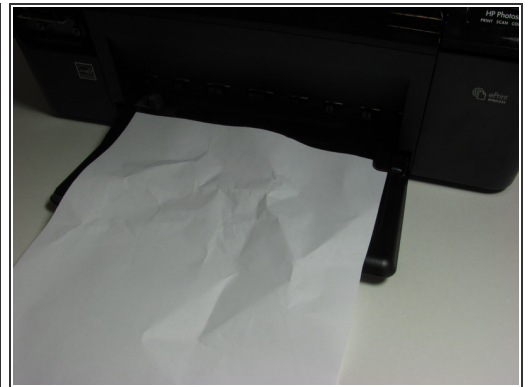

- Use your hand to remove the jammed piece of paper. Pull until the paper is out.

Step 3



- Do not reuse the piece of paper that caused the jam. Replace the paper with fresh, uncrinkled paper.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 10:24:16 PM.